


# SAFETY AND OPERATIONS INSTRUCTIONS FROM:


  
MK Diamond Products, Inc.

---

[www.mkdiamond.com](http://www.mkdiamond.com)

**MK-20 SERIES**  
OWNER'S MANUAL,  
OPERATING INSTRUCTIONS  
& PARTS LIST


**Gas Powered  
Concrete Saw**



Revision 306	08.2015
Manual Part# 156777	

**Caution:** Read all safety and operating instructions before using this equipment. This owner's manual **MUST** accompany the equipment at all times.

---

  
MK Diamond Products, Inc.

PLEASE READ THIS INFORMATION CAREFULLY PRIOR TO  
OPERATING EQUIPMENT

# TABLE OF CONTENTS

## **SAFETY**

Safety Messages	4
Damage Prevention Message	4
General Safety Precautions and Hazard Symbols	5
California Proposition 65 Message	8
Prestart Safety	9
Safety Label Locations	10
Product Specifications	11

## **UNPACKING, TRANSPORT and ASSEMBLY**

Unpacking	12
Contents	12
Transport	13
Assembly	14-15

## **SET-UP, OPERATION and SHUTDOWN**

Set-Up	16-18
Operation	19-22
Shutdown	23
Cleanup	23

## **MAINTENANCE**

Maintenance	24-30
-------------	-------

## **EXPLODED VIEW & PARTS LIST**

Figure 1 Assy, Saw 2020HSP Part # 156498	32-37
Figure 2 Assy, Saw 2024HSP Part # 158777	38-43
Figure 3 Frame, Less Engine Part # 169719	44-47
Figure 4 Assy, Blade Shaft Part # 156654	48
Figure 5 Engine, Honda GX630 Part # 169713	49
Figure 6 Engine Honda GX690 Part # 170048	50
Figure 7 Assy, Pointer Part # 166465	51

## **ACCESSORIES**

Accessories	52
-------------	----

## **ORDERING and RETURN INSTRUCTIONS**

Ordering Information	54
Return Material Policy	54
Packaging Instructions	54
Authorized Service Centers	54
Contact Information	55
Warranty	55

Safety precautions should be followed at all times when operating this equipment. Failure to read and understand the Safety Precaution and Operating Instructions could result in injury to yourself and others.


This Operation Manual has been developed to provide complete instructions for the safe and efficient operation of the MK-20 Series. For additional instruction concerning engine operations and care refer to the engine manufacturers instructions.

Before using this saw, ensure that the person operating the equipment has read and understands all instructions in this manual.

Descriptions, illustrations, and photos are as accurate as possible at the time of publication. Photos may include optional equipment or accessories and may not show all models covered by this manual.

### **SAFETY MESSAGE / ALERT SYMBOLS**

---

A safety message alerts you to potential hazards that could hurt you or others. Each safety message is preceded by a safety alert symbol (  ) and one of three words: **DANGER**, **WARNING**, or **CAUTION**.

#### **DANGER**

You **WILL** be **KILLED** or **SERIOUSLY INJURED** if you do not follow directions.

#### **WARNING**

You **CAN** be **KILLED** or **SERIOUSLY INJURED** if you do not follow directions.

#### **CAUTION**

You **CAN** be **INJURED** if you do not follow directions. It may also be used to alert against unsafe practices.

Each message tells you what the hazard is, what can happen, and what you can do to avoid or reduce injury. Other important messages are preceded by the word **NOTICE**.

#### **NOTICE**

You can cause **PROPERTY DAMAGE** to your machine if you don't follow directions.

The safety labels should be periodically inspected and cleaned by the user to maintain good legibility at a safe viewing distance. If the label is worn, damaged or illegible, it should be replaced. Contact MK Diamond or your dealer for replacement.

### **DAMAGE PREVENTION AND INFORMATION MESSAGES**

---

A Damage Prevention Message is to inform the user of important information and/or instructions that could lead to equipment or other property damage if not followed. Information messages convey information that pertains to the equipment being used. Each message will be preceded by the word **NOTE**, as in the example below.

**NOTE:** Equipment and/or property damage may result if these instructions are not followed.

## GENERAL SAFETY PRECAUTIONS AND HAZARD SYMBOLS

---

### SAFETY PRECAUTIONS

In order to prevent injury, the following safety precautions and symbols should be followed at all times!

### GENERAL SAFETY

---



**DO NOT** operate or service this equipment before reading this entire manual.

This equipment should not be operated by persons under 18 years of age.

**NEVER** operate this equipment when not feeling well due to fatigue, illness or taking medicine.

**NEVER** operate this equipment under the influence of drugs or alcohol.

Whenever necessary, replace nameplate, operation and safety decals when they become difficult to read.

**ALWAYS** store equipment properly when it is not being used. Equipment should be stored in a clean, dry location out of the reach of children.

### KEEP GUARDS IN PLACE



In order to prevent injury, keep guards in place and in working order at all times.

### EXPLOSIVE FUEL!



Gasoline is extremely flammable, its vapors can explode if ignited; store only in approved containers, in well-ventilated, unoccupied buildings and away from sparks or flames. Do not fill the fuel tank while the engine is running or hot. Spilled fuel could ignite if it contacts hot parts or sparks from ignition. Do not start the engine near spilled fuel. Never use gasoline as a cleaning agent. Never operate the machine in an explosive atmosphere.

### LETHAL EXHAUST GASES



Engine exhaust gasses contain poisonous carbon monoxide, an odorless colorless gas that can cause death if inhaled. Avoid inhaling exhaust fumes, and never run the engine in a closed building or confined area.

### ENGINE OVER-SPEED



Never tamper with the governor components or settings to increase the maximum speed of the machine. Severe personal injury and/or equipment damage could result if the equipment is operated speeds above design maximum.

**ACCIDENTAL STARTS**

Before starting the engine, be sure the ON/OFF switch is in the “OFF” position to prevent accidental starting. Place the ON/OFF switch in the OFF position before performing any service operation.

**ROTATING OR MOVING PARTS**

Keep hands, feet, hair, and clothing away from all moving parts to prevent injury. Never operate a power tool with shrouds or guards removed.

**HOT PARTS**

Engine components can become extremely hot from operation. To prevent severe burns, do not touch these areas while the engine is running, or immediately after it is turned off. Never operate the engine with heat shields removed.

**ALWAYS USE SAFETY GLASSES**

Safety glasses should always be worn when working around power tools. Everyday eye-glasses only have impact resistant lenses and may not prevent eye injury; they are NOT safety glasses.

**ALWAYS USE RESPIRATORY PROTECTION**

Exhaust gases may be harmful if inhaled. Do not operate gas-powered equipment in enclosed spaces. Respiratory protection should be worn when operating gas powered equipment.

**ALWAYS USE HEARING PROTECTION**

To reduce the possibility of hearing loss, always use hearing protection when operating equipment.

**REMOVE ADJUSTING KEYS AND WRENCHES**

Form a habit of checking to see that keys and adjusting wrenches are removed from the power tool before it is turned on.

**KEEP WORK AREA CLEAN**

Cluttered work areas and benches invite accidents.

**DO NOT USE IN DANGEROUS ENVIRONMENTS**

Do not operate equipment in dangerous environments. Always keep the work area well lighted.

**KEEP CHILDREN AWAY**

All visitors and children should be kept a safe distance from work area.

**MAKE WORKSHOP KID PROOF**

Make the workshops kid proof by using padlocks, master switches or by removing starter keys.

**DO NOT FORCE THE TOOL**

A power tool will do a job better and safer operating at the rate for which it was designed.

**USE THE RIGHT TOOL**

Do not force a tool or an attachment, to do a job that it was not designed to do.

**WEAR PROPER APPAREL**

Do not wear loose clothing, gloves, neckties, rings, bracelets, or other jewelry that may be caught in moving parts. Nonslip footwear is recommended. Wear protective hair covering to contain long hair.

**SECURE WORK**

Clamps or a vise should be used to hold work whenever practical. Keeping your hands free to operate a power tool is safer.

**DO NOT OVERREACH**

Keep proper footing and balance at all times by not overreaching.

**MAINTAIN TOOLS WITH CARE**

Keep tools sharp and clean for the best and safest performance. Always follow maintenance instructions for lubricating and when changing accessories.

**SHUTDOWN TOOL**

The saw should always be shutdown before servicing or when changing accessories such as blades, bits, cutters, etc...

**USE RECOMMENDED ACCESSORIES**

Consult the owner's manual for recommended accessories. Using improper accessories may increase the risk of personal or by-stander injury.

**NEVER STAND ON THE TOOL**

Serious injury could occur if a power tool is tipped, or if a cutting tool is unintentionally contacted.

**NEVER LEAVE TOOL RUNNING UNATTENDED – TURN POWER OFF**

Do not leave a tool until it comes to a complete stop. Always turn a power tool OFF when leaving the work area, or, when a cut is finished.

**CHECK FOR DAMAGED PARTS**

Before using a power tool, check for damaged parts. A guard or any other part that is damaged should be carefully checked to determine if it would operate properly and perform its intended function safely. Always check moving parts for proper alignment or binding. Check for broken parts, mountings and all other conditions that may affect the operation of the power tool. A guard or any damaged part should be properly repaired or replaced.

**DIRECTION OF FEED**

Always feed work into a blade or cutter against the direction of rotation. A blade or cutter should always be installed such that rotation is in the direction of the arrow imprinted on the side of the blade or cutter.

## **SILICA DUST WARNING**

---

Grinding/cutting/drilling of masonry, concrete, metal and other materials with silica in their composition may give off dust or mists containing crystalline silica. Silica is a basic component of sand, quartz, brick clay, granite and numerous other minerals and rocks. Repeated and/or substantial inhalation of airborne crystalline silica can cause serious or fatal respiratory diseases, including silicosis. In addition, California and some other authorities have listed respirable crystalline silica as a substance known to cause cancer. When cutting such materials, always follow respiratory precautions.

Use appropriate NIOSH-approved respiratory protection where dust hazard may occur. Paper masks or surgical masks without a NIOSH approval number are not recommended because they do little to protect the worker. For more information about respirator programs, including what respirators have received NIOSH approval as safe and effective, please visit the NIOSH website at:  
<http://www.cdc.gov/niosh/topics/respirators>

Observe OSHA regulations for respirator use (29 C.F.R. §1910.134).  
Visit <http://www.osha.gov> for more information.

## **CALIFORNIA PROPOSITION 65 MESSAGE**

---

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contain chemicals known (to the State of California) to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- Lead, from lead-based paints
- Crystalline silica from bricks, cement and other masonry products
- Arsenic and chromium, from chemically treated lumber

For further information, consult the following sources:  
<http://www.osha.gov/dsg/topics/silicacrystalline/index.html>  
<http://www.cdc.gov/niosh/docs/96-112/>  
<http://oehha.ca.gov/prop65/law/P65law72003.html>  
<http://www.dir.ca.gov/Title8/sub4.html>

Your risk from these exposures varies depending on how often you do this type of work. To reduce your exposure to these chemicals, work in a well-ventilated area, and work with approved safety equipment, such as dust masks that are specially designed to filter out microscopic particles. Where use of a dust extraction device is possible, it should be used. To achieve a high level of dust collection, use an industrial HEPA vacuum cleaner. Observe OSHA 29 CFR part 1926.57 and 1926.103.




### **WARNING**


Sawing, grinding and drilling generate dust. Excessive airborne particles may cause irritation to eyes, skin and respiratory tract. To avoid breathing impairment, always employ dust controls and protection suitable to the material being sawed or drilled; See OSHA (29 CFR Part 1910.1200).

**OPERATION & SAFETY DECALS**

The MK-20 Series Concrete Saw is equipped with a number of safety decals. These decals are provided for operator safety and maintenance information. Should any of these operation or safety decals become unreadable, replacements can be obtained by calling (800) 262-1575.

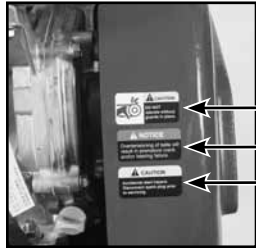

C  
G  
J

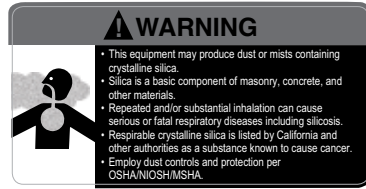

Part # 164202




Part # 155585




Part # 155578



Part # 170480

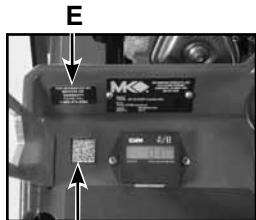


E

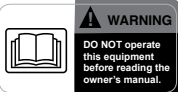

Part # 154398



Part # 155587 (3)

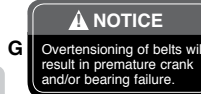


Part # 154399



Part # 155579



Part # 155582

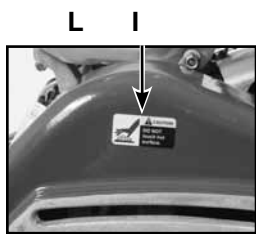

L

I




Part # 155588



Part # 155038




Part # 155580

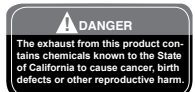


Part # 155581



Part # 156749

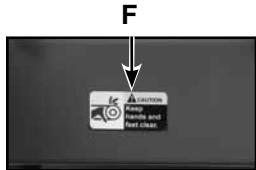


F

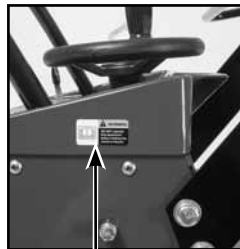

B



C

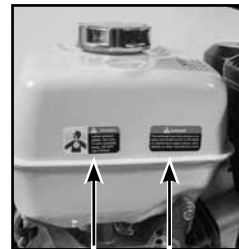


M


K



N

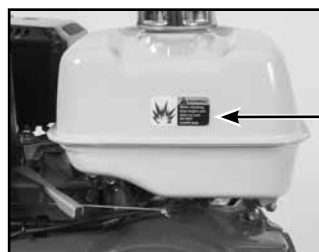

H

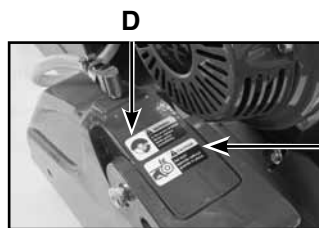

C



A

	Location	Description
A	Frame/Side	Proposition 65, Dust Warning
B	Frame/Side	Read Manual
C	Shaft Cover/Belt Guard/Blade Guard	Guards in Place
D	Blade Guard	Replace Blade Guard
E	Console	Service
F	Frame/Front	Hand & Feet Clear
G	Belt Guard	Overtensioning Belts
H	Gas Tank/Side	Refueling
I	Belt Guard	Hot Surface
J	Belt Guard	Accidental Start
K	Gas Tank/Side	Exhaust/Cancer
L	Console	QR Code for Manuals
M	Gas Tank/Side	Lethal Exhaust
N	Console	Machinery Hazard



## PRODUCT SPECIFICATIONS

The MK-20 Series is a versatile gas powered Concrete Saw. Operated and used according to this manual, the MK-20 Series will provide years of dependable service.

### General Description

The MK-20 Series is engineered as a portable concrete saw powered by a Honda, Kohler, Subaru or Vanguard gas engine. The saw is capable of 6-5/8" depth of cut with an 18" blade and 7-5/8" depth of cut with a 20" blade.

### Motor and Weight Specifications

Motor and Weight specifications for the MK-20 Series are listed below.

Model	MK2013HSP	MK-2013SE	MK-2013SSP	MK-2013VSP
Engine	Honda (Gas)	Subaru (Gas)	Subaru (Gas)	Vanguard (Gas)
Power	GX390	EH41	EH41	V-Twin
Starter	Pull	Electric	Pull	Pull
Fuel Capacity	1.6 Gallons	1.6 Gallons	1.6 Gallons	1.6 Gallons
Blade Capacity	18"	18"	18"	18"
Blade RPM	3,400	3,400	3,400	3,400
Depth of Cut	6-5/8" (167 mm)	6-5/8" (167 mm)	6-5/8" (167 mm)	6-5/8" (167 mm)
Weight	310 lbs. (141 kg)	290 lbs. (132 kgs)	310 lbs. (141 kg)	310 lbs. (141 kg)
Part #	156499	155714-S	156499-S	169949

Model	MK2014K	MK-2020HSP	MK-2024HSP	MK-2022SSP
Engine	Kohler (Gas)	Honda (Gas)	Honda (Gas)	Subaru (Gas)
Power	CH440	GX630	GX360	EH65
Starter	Pull	Electric	Electric	Electric
Fuel Capacity	1.6 Gallons	1.6 Gallons	1.6 Gallons	1.6 Gallons
Blade Capacity	18"	20"	20"	20"
Blade RPM	3,400	2,863	2,863	2,850
Depth of Cut	6-5/8" (167 mm)	7-5/8" (194 mm)	7-5/8" (194 mm)	7-5/8" (194 mm)
Weight	310 lbs. (141 kg)	392 lbs. (178 kgs)	398 lbs. (181 kg)	398 lbs. (181 kg)
Part #	168798	156498	158777	168952

### Blade

The MK-20 Series uses a 18" to 20" diameter diamond blade.

### Concrete Saw Usage

The MK-20 Series is designed to cut various grades of concrete surfaces.

**MK-20 Series Series Features**

- One-piece box construction chassis made from 3/16” hot-rolled steel
- Powder-coated chassis resists peeling and corrosion
- Cast-aluminum hinged blade guard
- Stainless steel water distribution system supplies water to both sides of blade
- Blade guard mounts on both left- or right-hand side of saw and cuts within 2” of wall or curb
- Heavy-duty blade shaft supported by two 1-3/16”, self-aligning pillow blockbearings
- Depth control assembly engineered for smooth, controlled blade insertion
- Built-in tach/hour meter
- Depth feed gauge indicator
- Heavy-duty hydro static transmission with variable speed drive
- Durable 8” x 2-1/4” non-slip rubber wheels with maintenance-free hubs & roller bearings
- Forward travel speed: 0-80’ minute

**UNPACKING**

Your saw has been shipped from the factory thoroughly inspected. Only minimal assembly and service is required. Check each item, making certain all items are accounted for and in good visual condition before discarding any packing materials. If there are any missing or damaged parts call MK Diamond Customer Service at 800-421-5830.







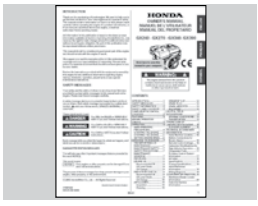
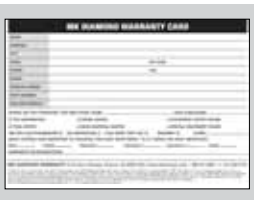


**WARNING** Never start engine until all initial servicing and set up steps are completed according to this operations manual and engine manual. Read and familiarize yourself with all controls and features of the saw before beginning operations.

Remove the saw from the pallet and place it on a flat surface. Two people are required to lift saw.

**CONTENTS**

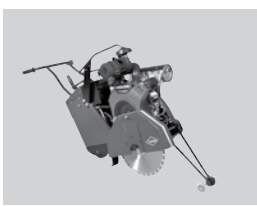In the containers, you will find one (1) MK-20 Series Saw, one (1) Blade Nut Wrench, one (1) Handlebar, two (2) Handlebar Bolts and Washers, one (1) Pointer, one (1) MK-20 Series Owner’s Manual, one (1) Engine Owners Manual, one (1) Warranty Card.

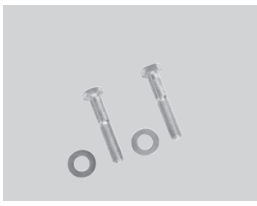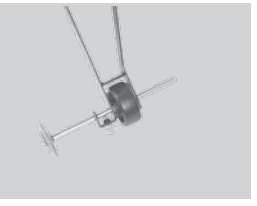				
MK-20 Series Saw	1 Blade Nut Wrench	Handlebar	Handlebar Bolts and Washers	Pointer
				
MK-20 Series Owner’s Manual	Engine Manual	Warranty Card		

## TRANSPORT

- ! CAUTION**
1. The MK-20 Series weighs approximately two hundred and thirty-five (235 pounds), use care when transporting.
  2. Two people are required to lift and transport the MK-20 Series.

## DESCRIPTION OF CONTROLS




1. The Depth Control Wheel raises the blade when rotated clockwise, and lowers the blade when rotated counterclockwise.
2. The keyed ignition switch turns clockwise to the on and start positions. The engine turns over with the switch in the start position. Release the key after the engine starts.
3. When the engine is running, the Tach/Hour Meter display will indicate the engines RPM. When the engine is shut off, the display will switch to run time, initially in minutes, and then switching to hours after the first hour of operation.
4. The Transmission Speed Lever moves the saw forward by pushing the lever away from the operator and moves the saw in reverse by pulling the lever toward the operator. Always place this control in central neutral position before using the engage/disengage lever or starting or stopping the engine.
5. The Throttle control increases engine rpm from slow (idle) at the bottom, to fast (full rpm) at the top.
6. Depth Gauge should be adjusted to zero when setting up the saw.
7. Use water hose bibb for wetting cutting. After connecting hose, turn on the water at the source and use Water Control Lever to control flow of water to the blade. Be sure that both sides of the blade are getting adequate flow of water.
8. Water Control Lever is off in the vertical position and fully on in the horizontal position. It may be placed at in between settings to regulate the water flow.
9. The Transmission Engage/Disengage Lever is engaged in the full down position.
10. The Choke is located on the back panel for convenient cold starting.

Follow the assembly instructions to prepare your saw for operation.

## HANDLEBAR ASSEMBLY



(A)  
Locate the threaded holes on both sides of the handlebar.

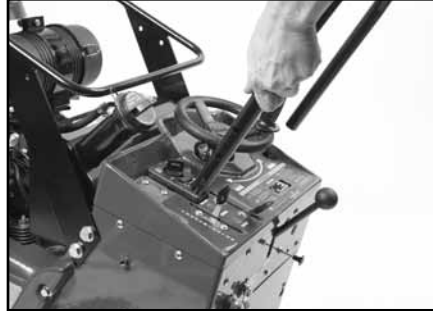

(B)  
Align the handlebar with the holes on both sides of the frame at the desired height.



(C)  
Install one Washer onto each bolt. Install bolt through the Handlebar and into the holes and tighten.

## FILLING OIL RESERVOIR

**NOTE:** The engine is shipped with no oil in the crankcase. Refer to the engine manual for details on the type and amount of oil required.

To fill the crankcase with oil, place the engine level. In order for this to be accomplished the blade must not be installed, and the depth adjustment must be down (until the engine is level).



(A)  
Verify the Oil Drain Cap is installed onto the Oil Drain Line and is tight. Refer to Engine Manual for details.

**NOTE:** The engine and oil must be warm and your saw must be on level ground to get an accurate oil level reading.

## HYDRO-STATIC TRANSMISSION

The Hydro-Static Transmission is factory filled with fluid having a viscosity equivalent to SAE 20 W 20.

### NOTICE

Do not overfill the expansion tank. Notice that the full level line is near the bottom of the expansion tank. Over filling will result in rupturing the seals on the hydromatic transmission and subsequent mechanical damage.




(A)

Check the oil level on the expansion tank to ensure that the transmission has adequate fluid.


## BATTERY PREPARATION

The 12 volt battery is shipped wet and charged. Connect the battery leads according to the following steps to ensure that power is provided to the engines electric starter.

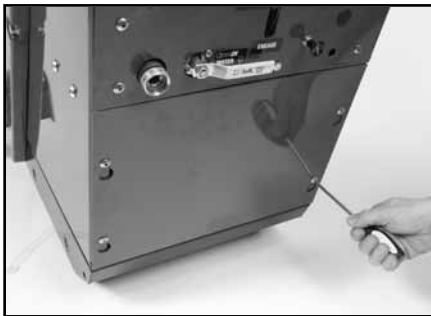

(A)

Remove the front lower panel to obtain access to the battery terminals.

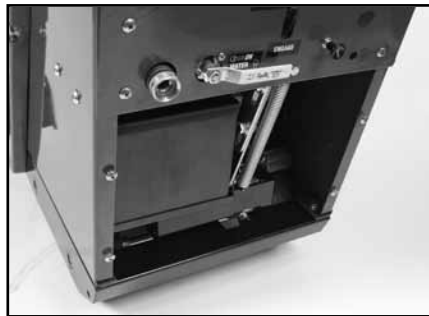

(B)


Connect the positive (+) battery cable to the positive battery terminal. Connect the negative battery cable to the negative terminal. Tighten the cap screws and nuts securely to assure proper electrical contact. Replace panel.

### WARNING


When tightening the positive (+) battery cable end, do not contact the negative (-) battery terminal with the wrench or other metallic objects. This could cause an electrical short and electrical sparking or an explosion of the battery. Be careful not to connect the battery in reverse polarity, as this will short circuit the battery charging system causing the fuse on the engine to become damaged, and also possibly resulting in an explosion of the battery.

**DIAMOND BLADE INSTALLATION**


- NOTE:**
1. When installing the blade retaining-bolt, ensure the threads of the bolt are aligned with the threads of the drive shaft so as not to “cross-thread” the bolt.
  2. When installing the blade ensure that the blade shaft and flanges are free from dirt and all foreign material before mounting blade on the blade shaft. Tightening a blade against an uneven surface can cause fracture or cause the blade to run out of alignment.
  3. Blade shaft threads are left-handed on the right side of the saw and right-hand on the left of the saw.

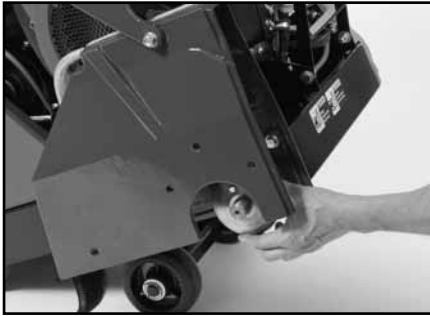


(A)  
Open the Blade Guard Cover.  
Locate the Blade Shaft Nut and the  
Outer Flange.

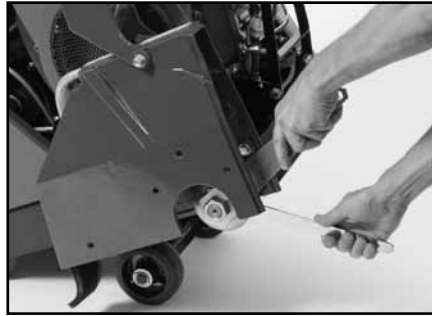

(B)  
Loosen the Blade Shaft Nut while  
holding the Shaft Wrench steady.

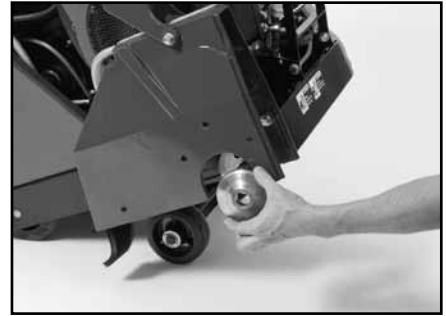


(C)  
Remove the Blade Nut and Outer  
Flange.

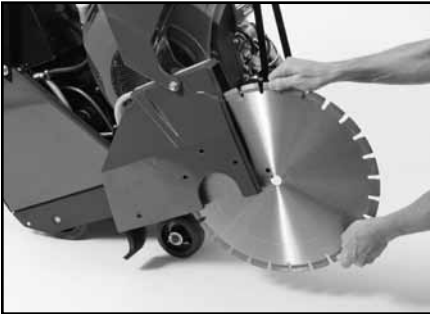


(D)  
Install the Diamond Blade onto the  
Blade Shaft and Drive Pin. Ensure  
directional arrow on the blade indi-  
cates proper rotational direction.



(E)  
Install the Outer Flange. Verify the  
drive pin is seated; it must project  
through the hole in the blade and into  
the flange.

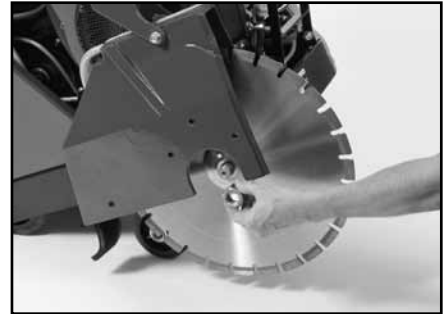

(F)  
Install the Blade Shaft Nut.

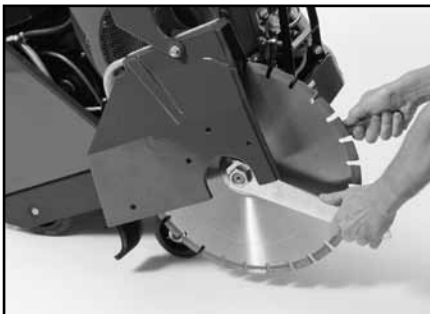

(G)  
Tighten Blade Shaft Nut holding  
the Blade Shaft steady. Lower and  
close Blade Guard.

**WARNING**

Do not operate the saw without the proper Blade Guard covering. Ensure that the blade exposure does not exceed 180 degrees during operation.

**DO NOT** use woodcutting, or carbide blades on this machine! Use **ONLY** Diamond blades on machine.

**NOTE:**

Raise the blade as high as possible when maneuvering so that the blade will not strike the pavement. The blade is spinning whenever the saw is running.

## FILLING FUEL TANK



### WARNING

1. Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.
2. To fuel, stop engine if running, and allow it to cool.
3. Fuel in a well-ventilated area.
4. Keep gasoline away from appliance pilot lights, barbeques, electric appliances, power tools, etc.
5. Wipe up spills immediately. Do not start engine until spill is dry.
6. When filling the fuel tank do not overfill. Always leave enough area for expansion due to environmental heating.


### NOTE:

1. Fuel can damage paint and plastic. Be careful not to spill fuel when filling the fuel tank. Damage caused by spilled fuel IS NOT covered under the warranty.
2. DO NOT use stale or contaminated gasoline, or an oil/gasoline mixture.



(A)

Remove the Fuel Cap.

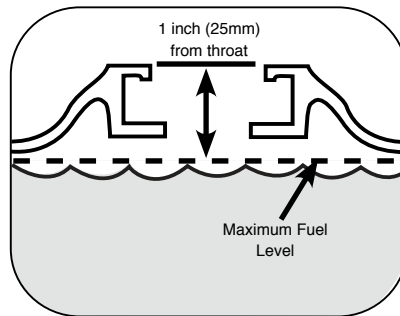


(B)

Ensure fuel level is 1" below the throat of the Fuel Tank.


## FRONT POINTER ALIGNMENT

The Front Pointer is set in line at the factory. However, the pointer should be checked for proper alignment with the blade after every use.

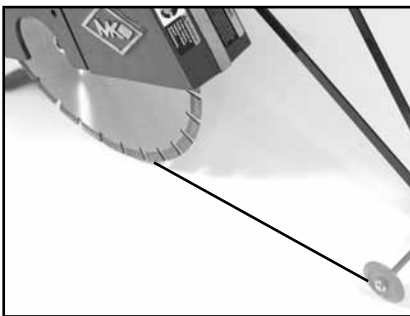


(A)

Using a straight edge, carefully mark a line 12 feet long on a smooth level concrete surface. Place Saw parallel to line; lower Blade and center it over the line.

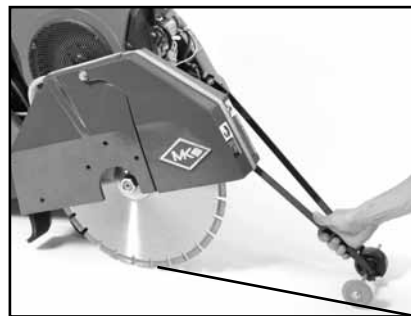

(B)

With the Blade centered over the line and the Saw Frame parallel to the line, lower the front Pointer assembly and position the pointer over the line.

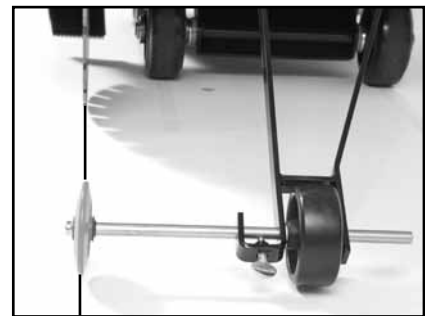


(C)

Adjust the Pointer in or out if the orange wheel is off the line by loosening the thumbscrew on the end of pointer. Align orange wheel with line and tighten thumbscrew. Roll saw along the entire length of the line to ensure proper alignment.


## PRE-START INSPECTION

The pre-start inspection should be performed before beginning any job.

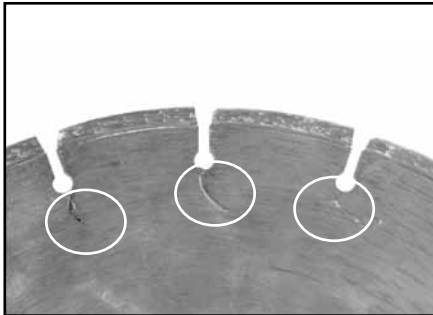


(A)

Inspect Blade for damage for cracks and wear, replace if necessary. Verify the Blade is correct for the material being cut.

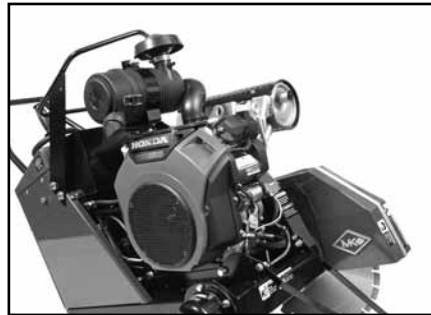


(B)

Inspect Engine for leaks. Make sure surfaces are clean and unobstructed.

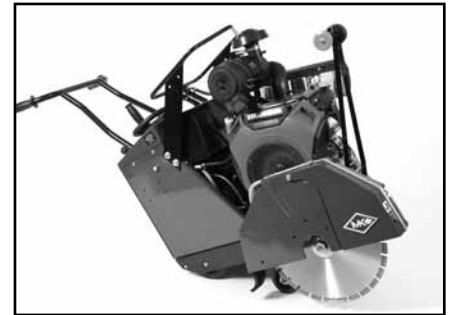


(C)

Inspect the saw for general damage and/or loose hardware. Check that the equipment covers and guards are in place and securely fastened.

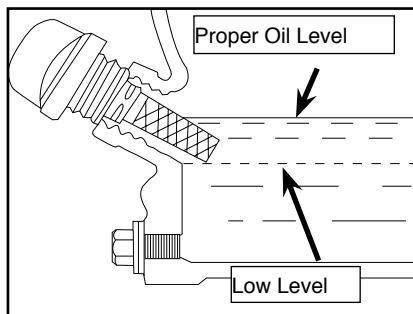

(D)

Check for proper oil level. Refer to Engine Manual for details.

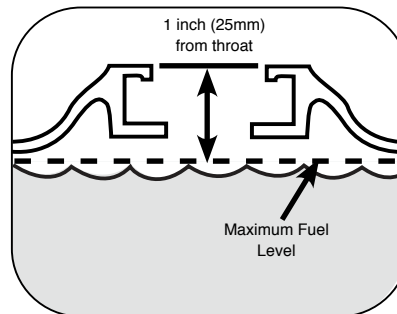

(E)

Ensure fuel level is 1" below the throat of the Fuel Tank.



(F)

Check the Air Filter for cleanliness. Refer to Engine Manual for details.

## WARNING

- **NEVER** disconnect any “emergency or safety devices”. These devices are intended for operator safety. Disconnection of these devices can cause severe injury, bodily harm or even death! Disconnection of any of these devices will void all warranties.
- Unauthorized equipment modifications will void all warranties. Manufacturer does not assume responsibility for any accident due to equipment modifications.
- **NEVER** use accessories or attachments, which are not recommended by MK Diamond for this equipment. Damage to the equipment and/or injury to user may result.



## ADJUSTING DEPTH OF CUT GAUGE



(A)

Turn Crank Wheel until Blade touches the ground.



(B)

Turn the Depth Gauge Indicator dial clockwise until it reads zero.

## BLADE SPEED AND THROTTLE SETTING



Since diamond blades cut best at specific rim-speeds, blades of different diameters must be turned at different blade shaft rpm's.

The MK-2013/14 will run either a 16" or 18" blade and the MK-2020/24/22 HSP will run a 16" through 20" blade.

Safe, efficient, economical cutting performance will occur at the engine rpm (as read on the tachometer) stipulated on the following chart.

Blade Diameter	set engine rpm to*
14"	full throttle (3500)
16"	3200-full throttle
18"	2850-3300
20"	2550-3000

The MK-20 Series engine shaft to blade shaft ratio is 1:895.



**WARNING** Operating saw blades at rotational speeds greater than those recommended by the manufacturer can cause blade damage and possibly subsequent personal injury.

Never exceed 3600 rpm blade shaft speed.

\* The MK-20 Series, it is possible to cause overspeeding of the blade at throttle settings above those stipulated on the above chart; **DO NOT EXCEED THESE ENGINE RPM SETTINGS!**

## STANDARD OPERATION

The MK-20 Series is intended for industrial applications and operated by experienced professionals. The operator must be aware of the machine's capabilities and limitations. It is the operators responsibility to use this machine under safe working conditions and conform with federal, state and local codes or regulations pertaining to safety, air, pollution, noise etc...


- CAUTION** Prior to operation of this machine the operator must determine the existence and location of any subsurface features that may be hazardous or could damage the equipment, (i.e. electric cable, natural gas line etc...)
- WARNING** Be sure blade is unobstructed and not resting on ground.  
Be sure hands and feet are clear of blade.
- WARNING** Carbon monoxide gas is toxic, breathing it can cause unconsciousness and/or death. Ensure that the space is adequately ventilated.  
Avoid any areas or actions that expose you to carbon monoxide.  
If the saw should stall for any reason, raise the blade out of the cut before restarting the engine.
- NOTICE** Read the engine instructions manual before starting saw.
- NOTICE** **DO NOT** crank engine for more than 30 seconds at a time. If engine fails to start, wait about 2 minutes between cranking periods to prevent starter from overheating.
- NOTICE** Allow engine to warm up at least 3 minutes before applying load. When engine is warm, throttle may be used out to maximum position. Special precautions should be taken during the break-in period as specified by the Engine Manual.



(A)  
Use the Depth Control Wheel to raise the blade clear of the floor.



(B)  
Attach the cooling supply hose to the Cooling Inlet, if wet cutting.

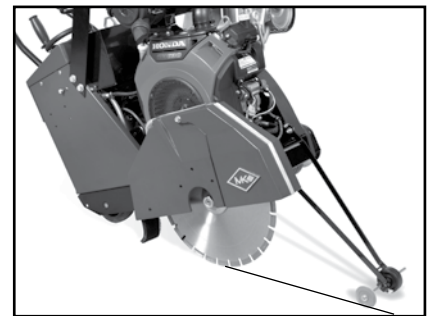

(C)  
Layout and mark the area to be cut using a chalk-line. Align Pointer and Blade to chalk-line.



(D)  
Place Transmission Speed  
Lever in Neutral.



(E)  
Verify Neutral Engagement Handle  
is down, in Neutral. Choke engine  
as required for cold starting.



(F)  
Push Engine Throttle Handle up  
half-way.



(G)  
Start engine by rotating Ignition  
Switch to the right.



(H)  
For Wet Cutting, open Cooling  
Supply Valve. Verify proper cooling  
flow and adjust the water flow on  
the Blade to a desired amount.



(I)  
Move the throttle all the way for-  
ward to "Fast" position.

**NOTE:** Perform the cut using only enough pressure to follow the original marked line. The saw has a natural tendency to pull towards the side on which the blade is mounted. To assure straight line cutting, apply pressure to the appropriate handle. If excessive pressure is required reduce the forward speed of the saw. Driving the saw too fast while cutting may cause the front wheels to lift causing the blade to cut at uneven depths. Do not attempt to steer the saw. Sudden and severe corrections can cause the blade to be damaged or broken.



(J)  
Slowly lower the Blade until the  
desired level is reached and begin  
the cut.



(K)  
When the cut is complete, raise  
the Blade completely out of the cut  
by turning Depth Control Wheel  
counter-clockwise.



(L)  
Close Cooling Supply Valve.



(M)

Move the Throttle Lever to lower blade speed.



(N)

Turn off engine by rotating Ignition Switch to off position.

**NOTE:**

Do not turn off engine while at full throttle.

**NOTICE**

If the engine has been running hard and is hot do not shut engine off abruptly. Cool engine by removing load and allowing engine to run idle for 3 to 5 minutes.

**STEP CUTTING**

1. Follow general instructions outlined in the section Standard Operation on page 19.
2. When deep sawing (more than 4") or concrete with hard aggregate, sawing to full depth in several cuts should be made in incremental steps of 1-1/2 to 2 inches until the desired depth of cut is reached. In softer aggregates or asphalt, it may be possible to saw full depth in two passes.
3. Gradually move the speed control lever forward to increase the cutting speed. If the blade stalls in the cut (which can happen when deep sawing) immediately raise blade from cut. If not done at once, the belts will spin freely and burn. Check belts for proper tension and continue sawing at a slower rate of speed.
4. On final pass, lower the blade until it hits the sub-base (sandy color will appear in the water being discharged from the cut). Raise blade approximately 1/2" from bottom. The sand and gravel particles of the sub-base may cause premature wear or damage to the saw blade.
5. It is common, on the final pass of the cut, for pavement to wedge blade, particularly on a hot day. When this happens, immediately stop engine. If the blade is wedged, remove the Blade Shaft Bolt and Outside Collar and move the saw away from the blade. To remove a wedged blade from the concrete, use a jack hammer and carefully chip out concrete around the blade. (Pounding or twisting the blade may cause severe damage).
6. Go slowly with a new blade until it "opens up" that is, until you can see and feel the diamonds.
7. Small corrections can be made by leaning on handles.  
Deep sawing is very hard on saws and blades. Experienced operators soon get a "feel" for the saw and are constantly on guard to slow down when they hit excessive steel or hard aggregate.


**DRY CUTTING**

- NOTE:**
1. Ensure the blade you are using is clearly marked for dry cutting.
  2. Check the condition of the air filter at least every four hours of operation. Refer to Engine Manual for details.

Airflow helps to cool the blade during dry cutting. Cutting too deep with one pass, or exerting excessive forward or side pressure can be dangerous and cause damage. Step cut in increments of 2 inches or less, for best results. Thinner blades are especially advantageous when cutting dry.

**BLADE GUARD REPOSITIONING**


**WARNING** Do not operate saw with any guards removed. Turn master engine switch to off position to avoid accidental starts when removing guards.

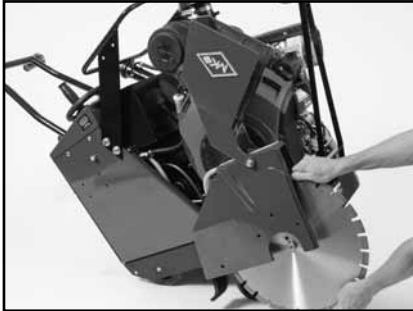


(A)  
Remove Diamond Blade.



(B)  
Remove the Cooling Transfer Hose from the Blade Guard by pressing the quick release.

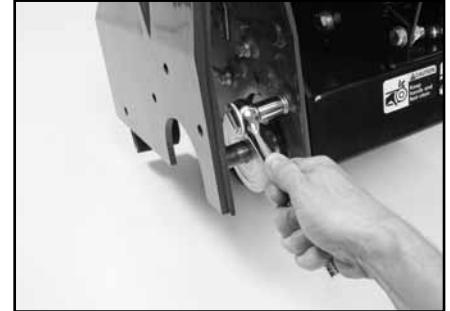


(C)  
Locate the four Blade Guard Retaining Bolts.

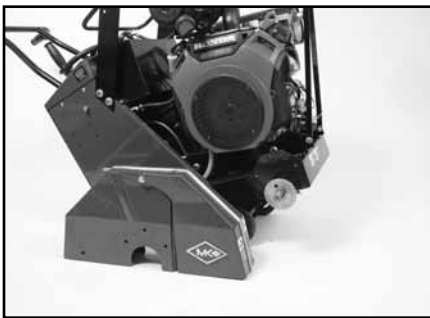

(D)  
Remove the Blade Guard Retaining Bolts and remove the Blade Guard.



(E)  
Locate the Blade Shaft Cover Retaining Bolts.

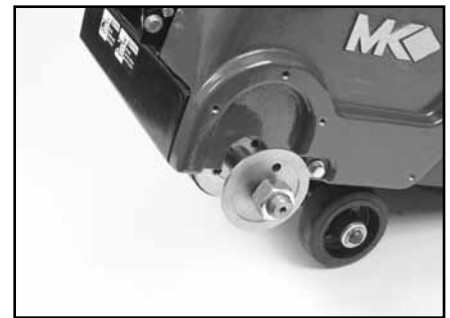

(F)  
Remove the Blade Shaft Cover Retaining Bolts and the Blade Shaft Cover.



(G)  
Install the Blade Guard on the opposite side of the saw.



(H)  
Install Diamond Blade




(I)  
Install the Cooling Transfer Hose to the Blade Guard.



(J)  
Install the Blade Shaft Cover.



(K)  
Remove the Pointer.

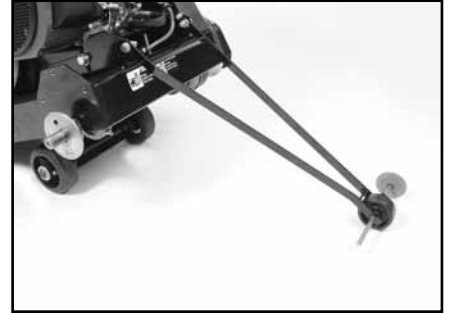

(L)  
Install the Pointer on the opposite side, next to Blade Guard.  
(See Front Pointer alignment Page 16)

## EMERGENCY ENGINE SHUTDOWN



(A)  
Place Engine Master Switch in the OFF position.



(B)  
Move the Throttle Lever to lower blade speed. Place Fuel Valve in the OFF position.

## CLEANUP



### CAUTION

Engine parts are extremely hot following use, allow engine to cool 1/2-hour before cleaning. Use care during cleanup to avoid injury.


### NOTE:

1. To extend operating life, the Concrete Saw should be cleaned following every use.
2. Using a garden hose or pressure washer is not advised as it can force water into the air cleaner or muffler opening. Steam cleaning is the preferred method of cleaning.
3. Use care when cleaning around electrical components.




(A)

Verify the engine is off and cool before beginning to clean. Clean the saw with soap and water.

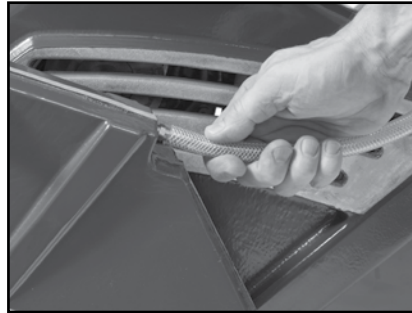

(B)

Clean water system outlets, including water tubes in blade guard.

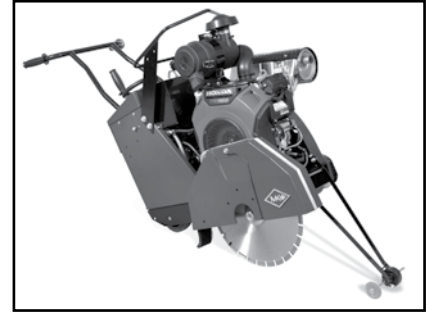

(C)

Clean the remainder of the exterior surface (except the engine).

**MAINTENANCE SCHEDULE**

Item should be performed at every indicated hour(s) or interval period whichever goes first.


Maintenance Schedule	Maintenance Operation	Daily	25 Hours or Weekly	100 Hours or Seasonal
<b>Air Filter</b>	<b>Check</b>	Every 4 Hours When Dry Cutting Every 8 Hours When Wet Cutting		
	<b>Change Air Filter</b>			•
<b>Hydrostatic Transmission/Reservoir</b>	<b>Check Oil</b>	•		
<b>Mainframe</b>	<b>Blade Shaft Bearings</b>	Lube Blade Shaft Bearings at end of Operations		
	<b>Pivot Bearings</b>		•	
	<b>Chain Drive</b>	•		Adjust Tension •
	<b>Transmission Control Assemblies</b>		•	
	<b>Battery</b>		•	
	<b>V-Belts</b>		•	Replace •
<b>Battery</b>	<b>Check Water Level</b>		•	
<b>Engine</b>	Definitive information on engine maintenance is contained in the Engine Manual provided separately. Perform all maintenance procedures as recommended by the engine manual.			

## MAINTENANCE SAFETY

- Always turn the master engine switch to the off position.
- **NEVER** lubricate components or attempt service on a running machine.
- Keep the machinery in proper running condition.
- Fix damage to the machine immediately and always replace broken parts, or missing decals.


## NEW MAINTENANCE

Perform the following after initial purchase and operation of the saw.

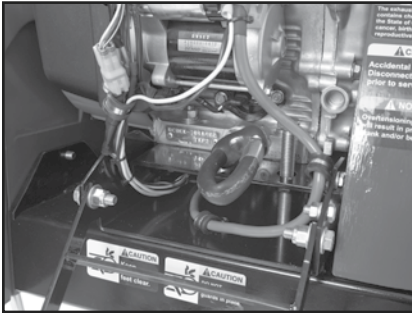

(A)

Change engine oil after first month or first 20 operating hours (See Engine Manual).

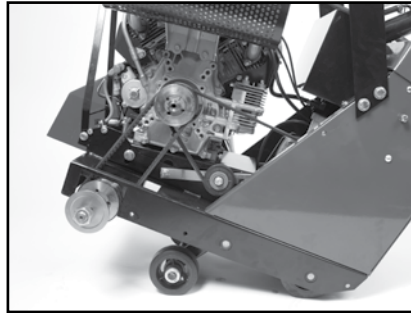

(B)

Check and adjust tension on all belts following first 48 hours of operation.

## Maintenance Following Use

The following maintenance should be performed following each use.




(A)

Shut down the Engine. Let saw cool before proceeding.



(B)


Check Air Filter (See Engine Manual).

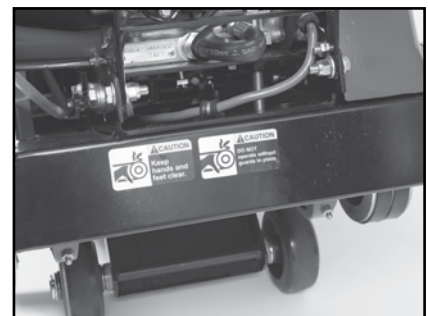


(C)

Lubricate the Grease Fitting on the Blade Shaft.




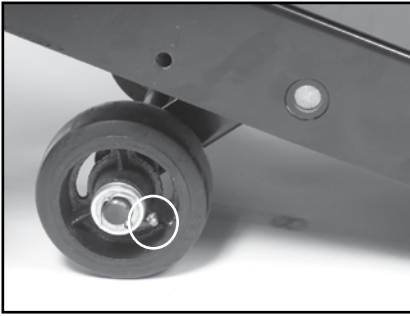

(D)  
Lubricate the zerk fitting on each wheel.

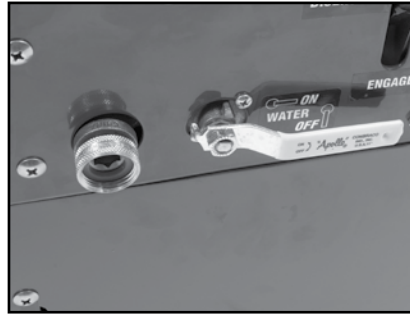


(E)  
Lubricate the Cooling Supply Valve.

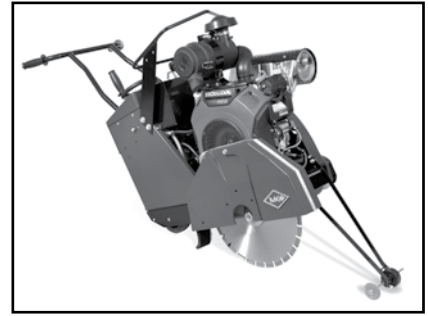


(F)  
Verify the tightness of all bolts and screws. Clean the saw (except the engine) with soap and water.

**Weekly (50 hours) and Monthly (200 hours)**

The following should be performed monthly. Items should be lubricated using waterproof grease.

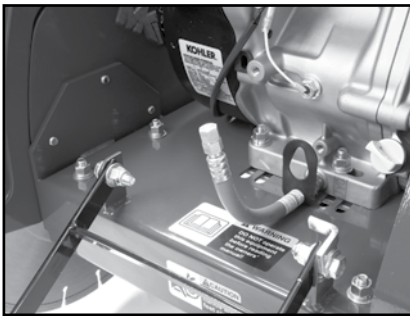


(A)  
Change engine oil every 100 hours. Refer to Engine Manual for details.

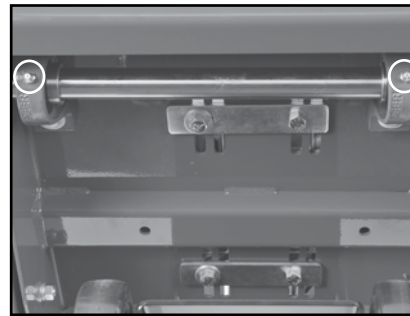

(B)  
Lubricate the Blade Shaft Bearings (Monthly).




(C)  
Clean engine Air Filter weekly and replace monthly. Refer to Engine Manual for details.

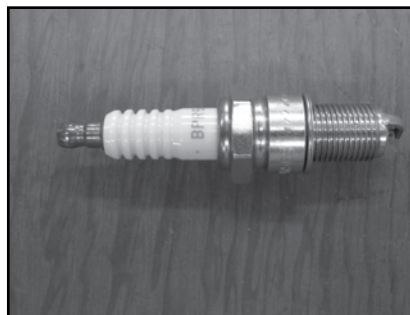

(D)  
Clean Spark Plug Weekly and re-adjust Spark Plug monthly. Refer to Engine Manual for details.



(E)  
Clean and lubricate the Blade Shaft.

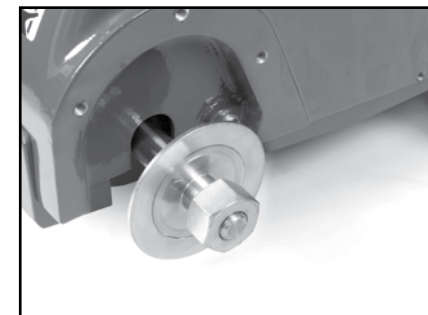


(F)  
Clean and lubricate the Blade Retaining Bolt.

**NOTE:** Definitive information on engine maintenance is contained in the engine manual provided separately. Perform all maintenance procedures as recommended by the Engine Manual.

**500 Hours and 1000 Hour Maintenance**


---

Perform the following maintenance every 500 hours.

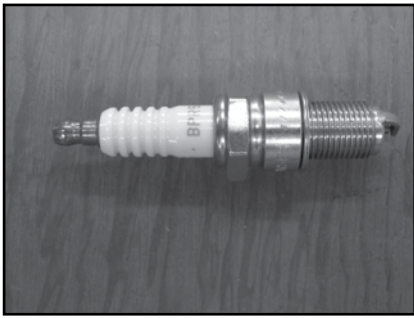


(A)

Replace Spark Plug. Refer to Engine Manual for details.

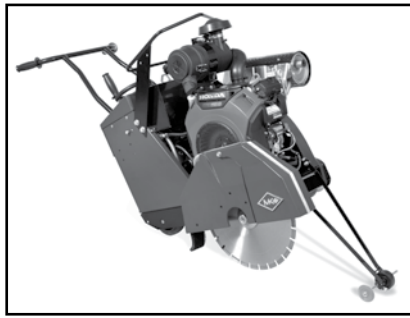

(B)

Have Authorized Repair Shop perform 500-hour maintenance.

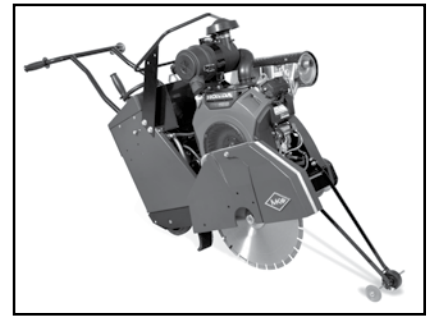


(C)

Have Authorized Repair Shop perform 1000-hour maintenance.

**Yearly and Two-Year Maintenance**

---

Perform the following maintenance every year.

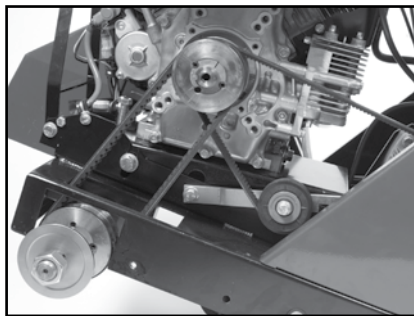

(A)

Inspect belts for proper tension and wear.

## Check Fuel Level

For all Engine related maintenance and troubleshooting refer to the Engine Manual.




- WARNING**
1. Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.
  2. To fuel, stop engine if running and allow it to cool.
  3. Refuel in a well-ventilated area.
  4. Keep gasoline away from appliance pilot lights, barbeques, electric appliances, power tools, etc.
  5. Wipe up spills immediately.

- NOTE:**
1. Fuel can damage paint and plastic. Be careful not to spill fuel when filling the fuel tank. Damage caused by spilled fuel IS NOT covered under the warranty.
  2. DO NOT use stale or contaminated gasoline or an oil/gasoline mixture.



(A)

Remove the Fuel Cap. Refer to Engine Manual for details.

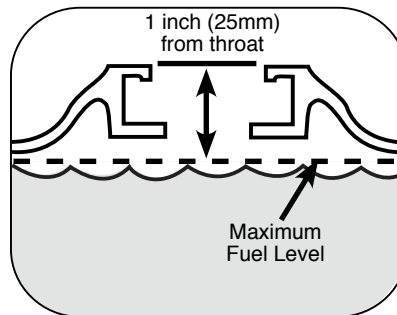


(B)

Ensure fuel level is 1" below the throat of the Fuel Tank.

## Engine Maintenance

Engine maintenance and adjustment is necessary to keep the saw in good operation condition. Maintenance operations include oil changes, filter changes, air cleaner, spark plug, fuel filter etc...Perform all maintenance procedures as recommended by the Honda, Vanguard, Kohler or Subaru engine manual provided separately.

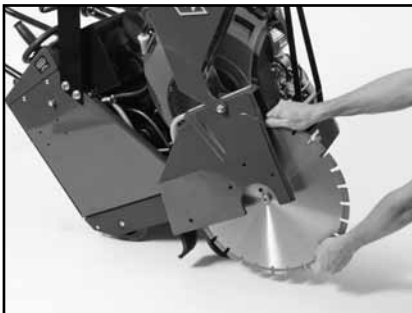

(A)

Remove the Diamond Blade.



(B)

Lower the MK-20 Series to its lowest position.



(C)

Free the Oil Drain Line. Place a catch basin below the Oil Drain Line. Remove the Drain Cap to drain oil completely. Refer to Engine Manual for details.

## Engine Air Filter Inspection, Cleaning and Replacement

---



(A)

Clean the Air Filter. Refer to Engine Manual for details.

## Spark Plug Adjustments and Replacement

---

For all Engine related maintenance and troubleshooting refer to the Engine Manual.



**CAUTION**

DO NOT work around the engine while hot.



(A)

When installing the Spark Plug, ensure the threads are aligned with the threads in the engine so as not to “cross-thread” the plug.

## Electrical System

---

A fuse protects the battery charging circuit. The fuse and the battery are the only user serviceable parts of the electrical system, a short circuit or a battery connected in reverse polarity will blow the fuse. Refer to the Engine Manual for the location and type of fuse. The fuse on the Engine is located between the starter solenoid and the engine, and is rated at 30 amps.



**CAUTION**



If the fuse blows, determine the cause of the problem before resuming operations.

**Battery**

Check water level weekly. Add distilled water if necessary. Check terminal cables and remove any deposits. Remove the battery for recharging and follow the instructions for recharging. Damage can result to the battery and electrical system if the battery is charged or installed in reverse polarity. Make sure that the negative terminal is connected to ground.


Remove and install battery as per instructions in Assembly Section of this manual. Be careful not to contact metal while loosening positive terminal with tools.



**CAUTION**

Observe all battery precautions as outlined in the Assembly Section of this manual.

**Belt Adjustment and Replacement**

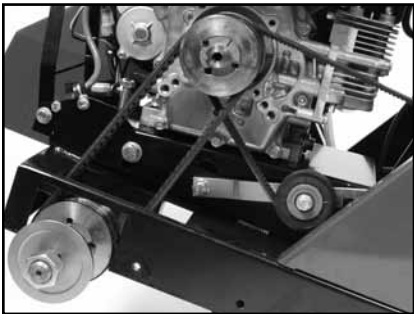

This machine is equipped with two heavy duty V-belts which are tensioned properly at the factory. These must be re-tensioned after the first half day of operation and periodically thereafter. Adjust to the original tension as set at the factory, which is approximately 1/4 inch of deflection of the center of the belt halfway between the pulley on the motor and the pulley on the blade shaft.

To adjust belt tension, first remove the belt guard. With the belt guard removed, loosen motor mount bolts. Loosen the lock nut and adjust set bolt on the motor tension adjuster until the required belt tension is achieved.

Retighten the motor mounting bolts.

The two most common causes of misalignment are shown in the drawings.

- A. the engine drive shaft and the blade shaft are not parallel.
- B. the pulleys are not located properly on the shafts.


Never make adjustments to belts or pulleys while engine is running.

**CAUTION**



**DO NOT OVER TENSION** as damage to belts and bearings may occur. Belts that are too loose may slip, resulting in short life and loss of power to the blade shaft. If any belts are worn or damaged, replace the complete set.

The motor mounting plate must be maintained parallel to the frame. Make sure all lock nuts are tightened and retighten the bracket bolts.

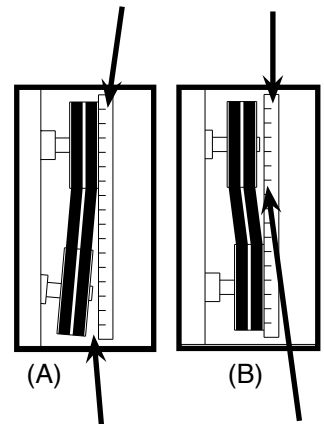

**NOTE:**

Gap between steel straight edge and sheave.